

Created: 2003-03-11

Autodiagnos Technical Bulletin

SYSTEM: AUDI A4 / S4

TITLE: ABS / ESP

ISSUE: ESP SYSTEM TEST

BACKGROUND: THE ESP TEST IS USED TO CHECK THE PLAUSIBILITY OF THE SIGNALS FROM THE LATERAL ACCELERATION, YAW RATE AND PRESSURE SENDERS.
TEST SHOULD ALWAYS BE PERFORMED AFTER REMOVING AND REPLACING ESP COMPONENTS.

ACTION:

Enter 03 – ABS

Select 04 – Read data stream in basic setting

Enter channel 003

System test actuated is displayed

Press Exit

Disconnect the Multi-Tester pro

The ABS and ESP light remains on until the test is completed

Start engine

Press brake pedal until the ESP light goes out

Drive test left and right cornering then drive straight

Test completed when the ABS light goes out

NOTES:

ONCE THE TEST HAS BEEN STARTED IT CANNOT BE TERMINATED AND MUST BE COMPLETED.

The information in this data sheet is subject to change without notice. Autodiagnos shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.
