

## ALL VEHICLES WITH TRANSPONDER KEYS



## Transponder key programming procedure for VOLVO

### Prerequisites:

All vehicle keys must be available at time of programming  
4 digit vehicle immobiliser access code must be available

*Insert the key to be programmed into the ignition lock*

*Switch the ignition ON*

Select LANGUAGE \*

Select VEHICLE MODEL \*

Select GROUP 3. - ELECTRICAL \*

Select IMMOBILISER \*

Select PROGRAM IMMOBILISER \*

*The display shows the number of keys programmed and the number of free locations*

ENTER

Select ADD KEY \*

*Enter 4 digit PIN code (xxxx)*

ENTER

*The display changes to show the number of keys programmed and the number of free locations*

\* After each selection the ENTER button must be pressed to acknowledge the selection and to move on to the next step. Using the EXIT button will return you to the previous step.

### If additional remote transmitters are to be programmed

Select YES when prompted 'DO YOU WANT TO PROGRAM. SEVERAL KEYS?'

Follow on-screen instructions.

A maximum of 6 keys can be programmed into the vehicle.